



effectively managing...

Fleet Productivity & Management, Mobile Field Services and Asset Management



### Plataforma de Rastreo GPS ¿Aún no tienes tu propia plataforma?

Si aún no tienes tu propia plataforma de monitoreo, consulta con nosotros sobre cómo puedes montar tu propio sistema. [info@celcominter.com](mailto:info@celcominter.com)  
Skype: **celcomtrack**

Inicie Tu Empresa de

Rastreo Satelital GPS





'Ignition OFF

AT\$TTFNT=13,0,9,0,0

AT\$TTFNT=13,3,20,23,1

'capota de motor

AT\$TTSTOCMD=5,AT\$TTSNDMG=1,"capota de motor"

AT\$TTFNT=15,0,1,1,1

AT\$TTFNT=15,3,20,60,1

AT\$TTFNT=15,3,28,5,1

'Panico input 1

AT\$TTFNT=18,0,0,1,1

AT\$TTFNT=18,3,20,61,1

'Desconexion Bateria

AT\$TTSTOCMD=3,AT\$TTSNDMG=1,"Desconexion Bateria"

AT\$TTFNT=14,0,3,0,0

AT\$TTFNT=14,3,20,78,1

AT\$TTFNT=14,3,28,3,0

'conexion Bateria

AT\$TTFNT=17,0,3,1,1

AT\$TTFNT=17,3,20,79,1

'Input 1 activate - Event identifier 14

AT\$TTFNT=14,0,0,1,1

AT\$TTFNT=14,3,37,14,1

'Input 1 deactivate - Event identifier 15

AT\$TTFNT=15,0,0,0,0

AT\$TTFNT=15,3,37,15,1

'Input 2 activate - Event identifier 16

AT\$TTFNT=16,0,1,1,1

AT\$TTFNT=16,3,37,16,1

'Input 2 deactivate - Event identifier 17

AT\$TTFNT=17,0,1,0,0

AT\$TTFNT=17,3,37,17,1

'SIM card inserted - Event identifier 18

AT\$TTFNT=18,0,47,1,1

AT\$TTFNT=18,3,37,18,1

'SIM card removed - Event identifier 19

AT\$TTFNT=19,0,47,0,0

AT\$TTFNT=19,3,37,19,1

'Battery level less than 20% - Event identifier 20

AT\$TTFNT=20,0,48,0,20

AT\$TTFNT=20,3,37,20,1

'Battery desconection - Event identifier 24

AT\$TTFNT=24,0,3,0,0

AT\$TTFNT=24,3,37,24,1

'Battery conection - Event identifier 25

AT\$TTFNT=25,0,3,1,1

AT\$TTFNT=25,3,37,25,1

'Ping event - Event identifier 26

'Send platform command: AT\$TTTRGEV=18,1

AT\$TTFNT=26,0,18,1,1

AT\$TTFNT=26,3,37,26,1

'Modem power up indication - Event identifier 29

AT\$TTFNT=29,0,10,1,1

AT\$TTFNT=29,3,37,29,1

'jamming

AT\$TTGSMJDC=1,10,40,30

AT\$TTFNT=64,1,40,1,1

AT\$TTFNT=64,3,20,7,1

'Exceso de Velocidad

AT\$TTFNT=16,0,15,45,250

AT\$TTFNT=16,3,20,32,1

'giro 90 grades

at\$ttfnt=65,0,45,91,135

at\$ttfnt=65,3,37,47,1

AT\$TTSMSDST=1,"configure su numero de tel"

'mensaje de texto panico

AT\$TTSTOCMD=1,AT\$TTSNDMG=1,"BOTON DE PANICO"

AT\$TTFNT=66,0,0,1,1

AT\$TTFNT=66,3,28,1,0

' vehiculo remolcado

AT\$TTSTOCMD=2,AT\$TTSNDMG=1,"vehiculo remolcado"

at\$ttfnt=67,0,29,1,1

AT\$TTFNT=67,2,9,0,0

at\$ttfnt=67,3,28,2,0



AT\$TTARG=2

AT&W

AT\$RESET